


Bauform QV40 – Umsetzen der aktiven Fläche

Werkzeuglos und mit einem Handgriff kann die aktive Fläche des Sensors in 5 Richtungen positioniert werden. Bitte den Fixierungsbügel nicht vom Wendewinkel entfernen. Durch leichtes Zusammendrücken des Fixierungsbügels wird der Sensor von der Befestigungsschelle gelöst.

Anschließend kann die Positionierung der aktiven Fläche durch einfaches Drehen geändert werden. Ist der Sensor in der endgültigen Position, wird dieser in die Befestigungsschelle gesteckt, bis der Fixierungsbügel einrastet. Die sichere und komfortable Befestigung ist somit gewährleistet.

Housing style QV40 – Changing the orientation of the active face

Without tools and with one hand only, the active face of the sensor can be aligned in 5 directions. Please do not remove the fixing clamp from the turning bracket. A light squeeze of the bracket is enough to release the sensor from the fixing clamp. Afterwards the active face can easily be twisted to change the position. Once the sensor is in its final position, it is simply inserted in the fixing clamp until the clamp snaps in. Safe and easy mounting is thus guaranteed.

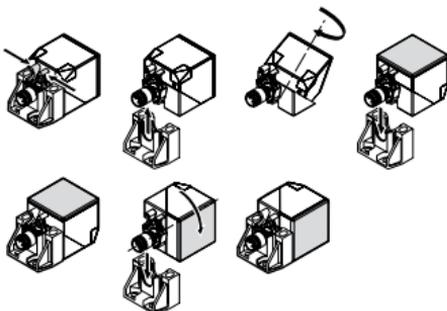

TURCK

Industrial
Automation